


Custom roll-out drawers

“Doing it yourself” has never been so easy!

The Custom Roll-Out Drawers System:

- Includes one rollout drawers & one mounting base with screws
- Fully Assembled
- Mounting unit attaches to shelf with 4 screws!
- Pre-aligned rails on the mounting unit ensure smooth rollout action!

How to measure for the correct drawer: Width x Depth x Height

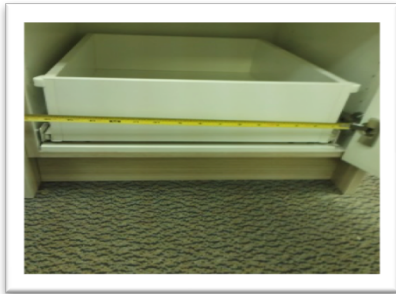

Determining the Drawer Width (W):

- Measure from the cabinet frame to hinge (W) Then round down to the nearest half inch and that is the drawer width needed.
- For example $W = 11 \frac{7}{8}$, correct size to order is $11 \frac{1}{2}$

Determining Drawer Depth (D)

- Standard kitchen cabinets are 22" deep (unobstructed inside dimension)
- Bathrooms are typically 18" or 20" deep.
- Check the depth of your cabinet. In particular watch for pipes, outlets, electrical cables or any other obstructions that would affect the depth of the drawer needed.

Check Clearance (H):

- Absolute height of (4") shallow drawer is $5 \frac{1}{4}$ " high
- Absolute Height of (6") deep drawer is $7 \frac{1}{4}$ " high
- Absolute height of a (8") deep drawer is $9 \frac{1}{4}$ " high
- Select 4, 6 or 8" height

If you have any questions you can call 403-252-0075

Custom Roll Out Drawers is Located at 7521 Flint Road SE Calgary AB